



M90S-2S/4S/6S

RP Panel Installation Addendum

Table of Contents

M90S-2S/4S/6S with RP



M90S-RPA.....	3
M90S-RPB.....	3
M90S-RPC.....	4
M90S-RPD.....	4

Important Safety Instructions


-  For qualified service technician only. Internal service or adjustment is to be carried out only by a trained and experienced technician.
-  Dangerous voltage exists at several points in this product. To avoid personal injury, do not touch any exposed connections or components while system is energized.
-  Turn off the system and switch off the input breaker before removing the protective case.
-  AC voltage is always present if the input AC power is still available.
-  High voltage may exist at DC capacitors. Before removing the protective case, wait for at least five minutes after turning off the UPS/Charger.
-  When batteries are connected the DC bus is energized! Disconnect batteries to deenergize DC circuits before maintenance.

M90S-RPA

PART NUMBER: 90000699


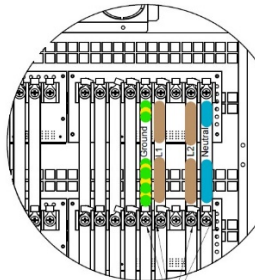
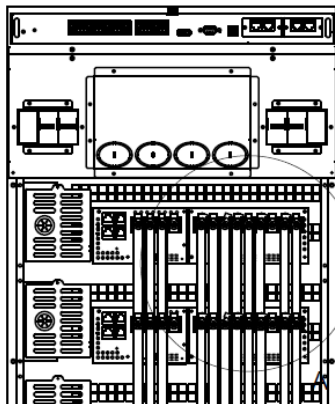


Output Buss Bars
Green on Ground
Blue on Neutral
One Brown on L1
One Brown on L2
(See labels on buss above)

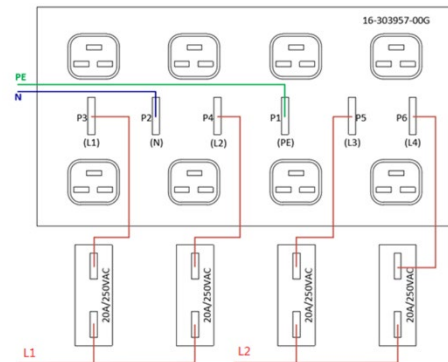


M90S-RPB

PART NUMBER: 90000700

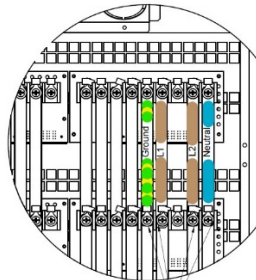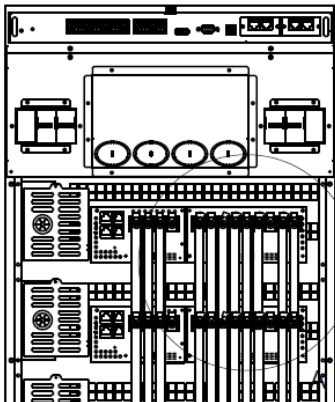
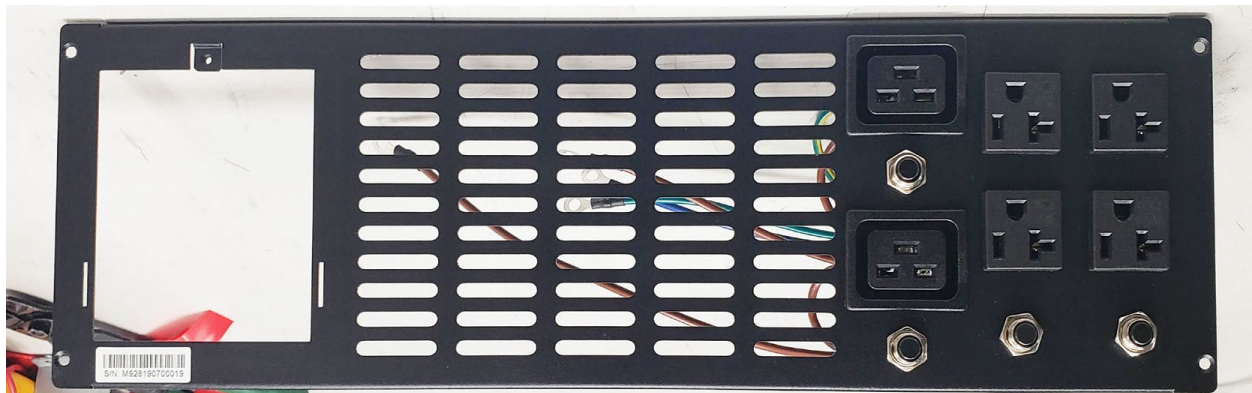


Output Buss Bars
Green on Ground
Blue on Neutral
One Brown on L1
One Brown on L2
(See labels on buss above)

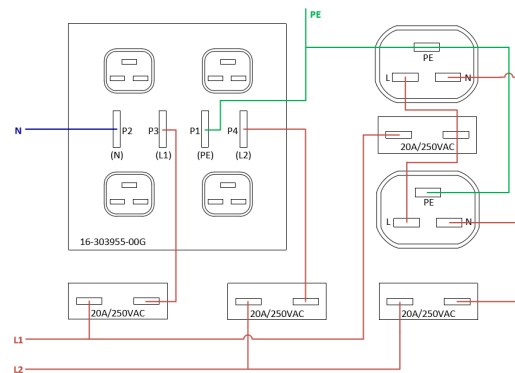


M90S-RPC

PART NUMBER: 90000701


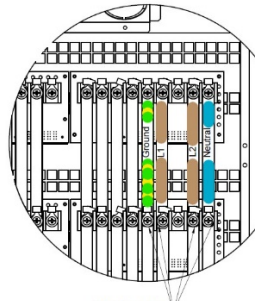
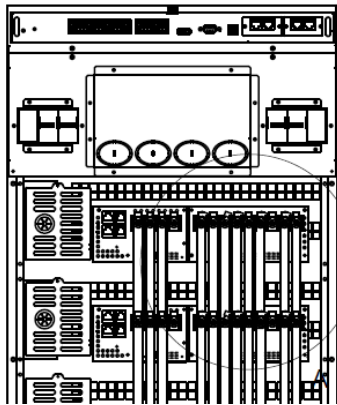


Output Bus Bars
Green on Ground
Blue on Neutral
One Brown on L1
One Brown on L2
(See labels on buss above)

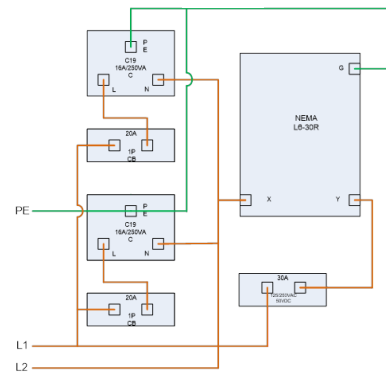

M90S-RPD

PART NUMBER: 90000702

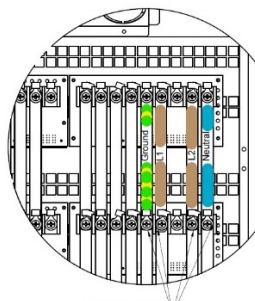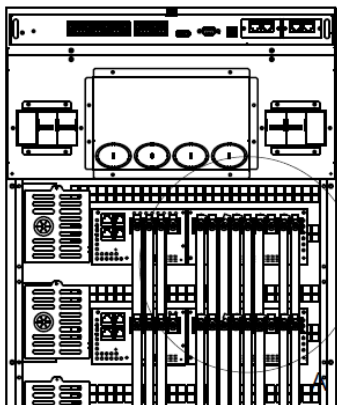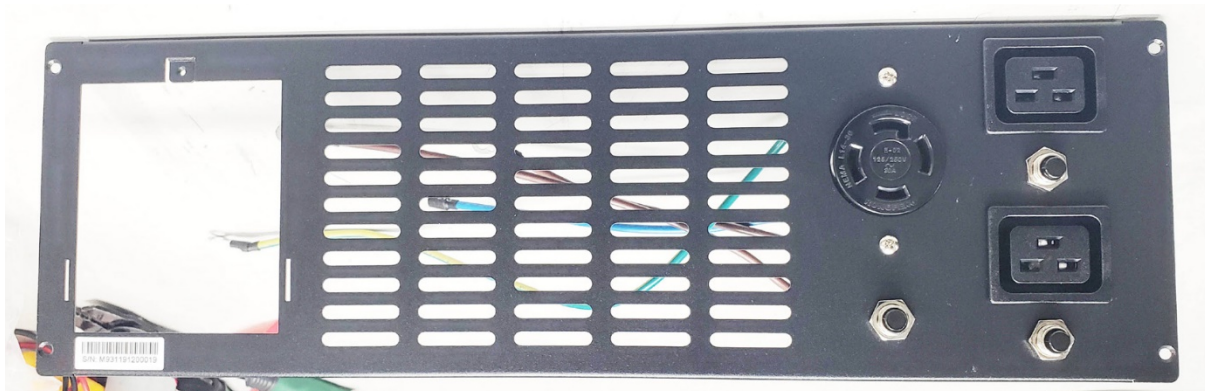

Output Bus Bars
Green on Ground
Blue on Neutral
One Brown on L1
One Brown on L2
(See labels on buss above)

