





S80i Sine Wave Line Interactive UPS


2000VA Model

User & Installation Manual

Product Overview

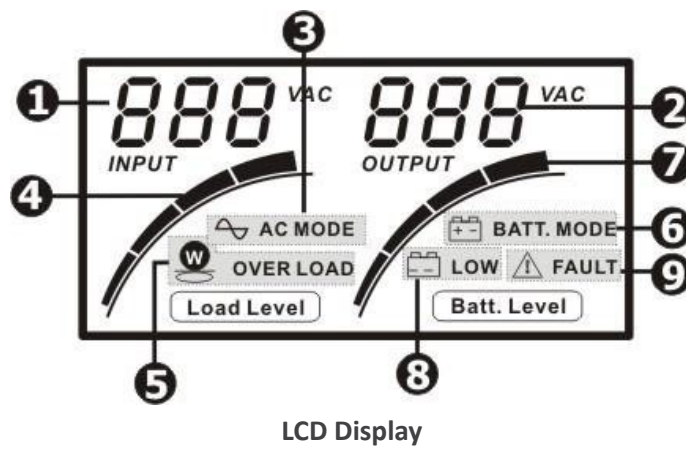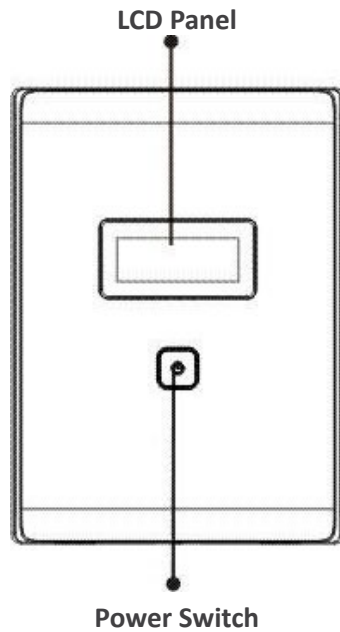

- 1. Input voltage
- 2. Output voltage
- 3. AC mode indicator
- 4. Load level
- 5. Overload indicator
- 6. Battery mode indicator
- 7. Battery level
- 8. Low battery indicator
- 9. Fault indicator

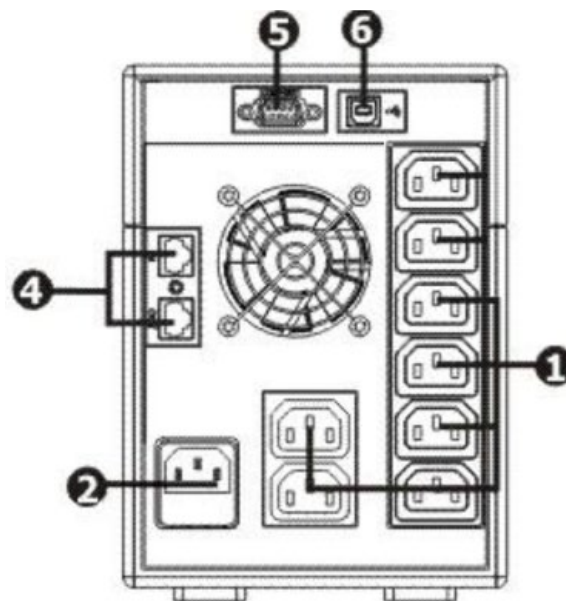

Rear View

1. Output Receptacles
2. AC Input
3. Circuit Breaker
4. Modem/Phone/Network Surge Protection
5. RS-232 Communication Port
6. USB Communication Port

Installation and Initial Startup

NOTE: Before installation, please inspect the unit. Be sure that nothing inside the package is damaged.

Placement & Storage Conditions

Install the UPS in a protected area that is free of excessive dust and has adequate air flow. Please place the UPS away from other units at least 20 cm to avoid interference. Do NOT operate the UPS where the temperature and humidity is outside the specific limits. (Please check the specs for the limitations).



Connect to Utility and Charging

Plug in the AC input cord to the wall outlet. For the best results, suggest to charge the battery at least 6 hours before initial use. The unit charges its battery while connecting to the utility.



Connect the Loads

Plug in the loads to output receptacles on the rear panel of the UPS. Simply turn on the power switch of UPS unit, then devices connected to the UPS will be protected by UPS unit.

Connect Modem/Phone/Network for Surge Protection

Connect a single modem/phone line into surge-protected "IN" outlet on the back panel of the UPS unit. Connect from "OUT" outlet to the computer with another phone line cable.

Connect Communication Cable

To allow for unattended UPS shutdown/start-up and status monitoring, connect the communication cable one end to the USB/RS-232 port and the other to the communication port of your PC. With the monitoring software installed, you can schedule UPS shutdown/start-up and monitor UPS status through PC.

Turn On/Off the Unit

Turn on the UPS unit by pressing the power switch. Turn off the UPS unit by pressing again the power switch.

Important Safety Warning (SAVE THESE INSTRUCTIONS)

Please comply with all warnings and operating instructions in this manual strictly. Save this manual properly and read carefully the following instructions before installing the unit. Do not operate this unit before reading through all safety information and operating instructions carefully.

CAUTION! Please transport the UPS only in the original package to protect against shock and impact.

CAUTION! To prevent the risk of fire or electric shock, install in a temperature and humidity controlled indoor area free of conductive contaminants. (See the specifications for the acceptable temperature and humidity range.)

CAUTION! To reduce the risk of overheating the UPS, do not cover the UPS' cooling vents and avoid exposing the unit to direct sunlight or installing the unit near heat emitting appliances such as space heaters or furnaces.

CAUTION! Do not attach non-computer-related items, such as medical equipment, life-support equipment, microwave ovens, or vacuum cleaners to UPS.

CAUTION! Do not plug the UPS input into its own output.

CAUTION! Condensation may occur if the UPS system is moved directly from cold to warm environment. The UPS must be absolutely dry before being installed.

CAUTION! Place cables in such a way that no one can step on or trip over them.

CAUTION! The mains socket outlet that supplies the UPS shall be installed near the UPS and shall be easily accessible. The UPS power cord must be connected to an earthed mains socket outlet for safety reasons.

CAUTION! Do not allow liquids or any foreign object to enter the UPS. Do not place beverages or any other liquid-containing vessels on or near the unit.

CAUTION! In the event of an emergency, press the OFF button and disconnect the power cord from the AC power supply to properly disable the UPS.

CAUTION! Do not attach a power strip or surge suppressor to the UPS.

CAUTION! If the UPS is with metal chassis, for safety purpose, grounding is a must during UPS installation in order to reduce leakage current below 3.5mA.

Attention: hazardous through electric shock. Also with disconnection of this unit from the mains, hazardous voltage still may be accessible through supply from battery. The battery supply should be therefore disconnected in the plus and minus pole at the quick connectors of the battery when maintenance or service work inside the UPS is necessary.

CAUTION! Servicing of batteries should be performed or supervised by personnel knowledgeable of batteries and the required precautions. Keep unauthorized personnel away from batteries. **CAUTION!** When replacing the batteries, use the same number and type of batteries.

CAUTION! Avoid touching eyes while working near batteries.

CAUTION! Have plenty of fresh water and soap nearby in case battery acid contacts skin, clothing, or eyes.

CAUTION! Do not disassemble the unit before contact with the qualified service center when service or repair is required.

CAUTION! To reduce risk of injury, only use qualified batteries from qualified distributors or manufacturers. Any unqualified batteries may cause damage and injury. Do NOT use old or overdue batteries. Please check the battery type and date code before installation to avoid damage and injury.

CAUTION! Internal battery voltage is 12VDC. Sealed, lead-acid, 6-cell battery.

CAUTION! Do not dispose of batteries in a fire. The battery may explode. Do not open or mutilate the battery or batteries. Released electrolyte is harmful to the skin and eyes.

CAUTION! Unplug the UPS prior to cleaning and do not use liquid or spray detergent.

CAUTION! A battery can present a risk of electric shock and high short circuit current. The following precaution should be observed before replacing batteries:

1. Remove watches, rings, or other metal objects.
2. Use tools with insulated handles.
3. Wear rubber gloves and boots.
4. Do not lay tools or metal parts on top of batteries.
5. Disconnect charging source prior to connecting or disconnecting batteries terminal.

Trouble Shooting

Use the table below to solve minor problems.

Problem	Possible Cause	Solutions
No words display on the front panel even though the mains is normal.	AC input is not connected well.	Check if the input power cord is firmly connected to the mains.
	AC input is connected to the UPS output.	Plug AC input power cord to AC input correctly.
Battery backup time is shorter than nominal value.	Batteries are not fully charged.	Charge the batteries at least 6 hours and then check the capacity again. If the problem still persists, please consult your dealer.
	Batteries defect.	Contact your dealer to replace the batteries.
Warning or fault icon is shown and alarm is continuously sounding.	Fan is locked or not working.	Check fans and notify your dealer.
	The UPS is overload.	Remove some loads first. Before reconnecting devices, please verify the total loads match the UPS capability specified in the spec.
Low battery icon is shown on the LCD screen.	Low battery.	Charge the UPS at least 6 hours.

Specifications

MODEL NUMBER		S80i-2000
INPUT	Capacity	2000VA/1400W
	Voltage	220/230/240VAC
	Frequency	50/60Hz
OUTPUT	Voltage	230VAC
	Waveform	Pure sine wave
	Frequency	50/60Hz auto sensing
	Transfer time	4ms (typical)
BATTERY	Battery type	Sealed, maintenance-free lead acid
	Battery quantity and size	(2) 12V 10AH
	Recharge	4–6 hours to 90% capacity
	Runtime at 50% load	Up to 10 min
PHYSICAL	UPS dimensions (W x D x H)	5.7 x 15.6 x 8.1 in
	Shipping dimensions	9.1 x 19.3 x 11.3 in
	UPS weight	25.4 lbs
	Shipping weight	28.0 lbs
	Line cord	6ft, IEC C13 to Schuko
	Receptacles	(8) IEC C13
	Cooling	Fan cooled
ENVIRONMENT	Operating temperature	32–104°F (0–40°C)
	Humidity	0–90%
	Altitude	11,500 ft above sea level
INDICATORS & ALARMS	LCD display	AC mode, battery mode, load/battery level, input/output voltage, overload fault, low battery
	Data line protection	RJ45
APPROVALS	FCC Class A, UL 1778, cTUV, RoHS	
WARRANTY	2 years electronics and battery	
COMMUNICATIONS INTERFACE	USB	
INCLUDED IN BOX	Shutdown and monitoring software, USB cable, user manual, detachable line cord	

Obtaining Service

If the UPS requires Service:

1. Use the TROUBLESHOOTING section in this manual to eliminate obvious causes.
2. Verify there are no circuit breakers tripped.
3. Call your dealer for assistance. If you cannot reach your dealer, or if they cannot resolve the problem, call Xtreme Power Conversion Corp Technical Support at 800.582.4524. Technical support inquiries can also be made at support@xpcc.com. Please have the following information available BEFORE calling the Technical Support Department:
 - Your name and address.
 - The serial number of the unit.
 - Where and when the unit was purchased.
 - All of the model information about your UPS.
 - Any information on the failure, including LED's that may or may not be illuminated.
 - A description of the protected equipment, including model numbers if possible.
 - A technician will ask you for the above information and, if possible, help solve your problem over the phone. In the event that the unit requires factory service, the technician will issue you a Return Material Authorization number (RMA).

If you are returning the UPS to Xtreme Power for service, please follow these procedures:

1. Pack the UPS in its original packaging. If the original packaging is no longer available, ask the Technical Support Technician about obtaining a replacement set of packaging material. It is important to pack the UPS properly in order to avoid damage in transit. Never use Styrofoam beads for a packing material.
2. Include a letter with your name, address, daytime phone number, RMA number, a copy of your original sales receipt, and a brief description of the problem.
3. Mark the RMA number on the outside of all packages. Xtreme Power cannot accept any package without the RMA number marked on the outside of the boxes.
4. Return the UPS by insured, prepaid carrier to the address provided by the Technician.
5. Refer to the Warranty statements in this manual for additional details on what is covered.