


zLock[™] Instructions




FEMALE END

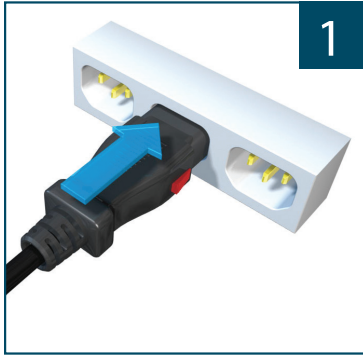


1
Insert cord firmly into device.



2
Cord is now locked.

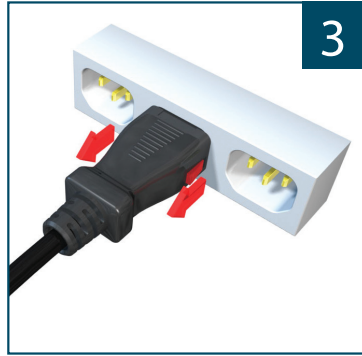


3
To release, pull on the red tabs and remove cord.

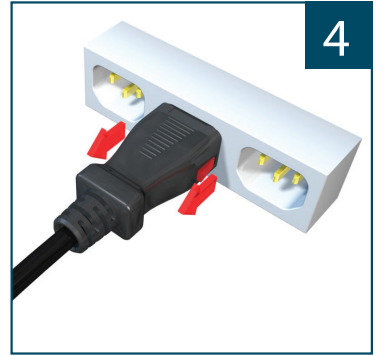


4
Cord will detach from device.

MALE END

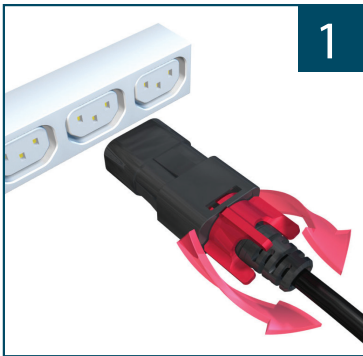


1
Ensure nut is backed out as far as possible.

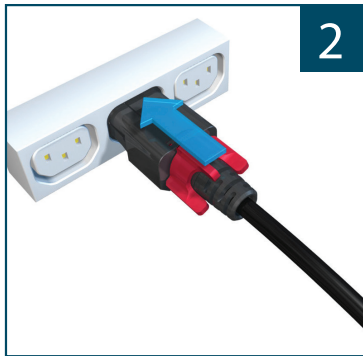


2
Insert cord firmly into device.




3
Tighten red nut while pushing towards PDU to maintain insertion. After initial resistance is felt, tighten only another $\frac{1}{4}$ to $\frac{1}{2}$ turn. Do not over-tighten.

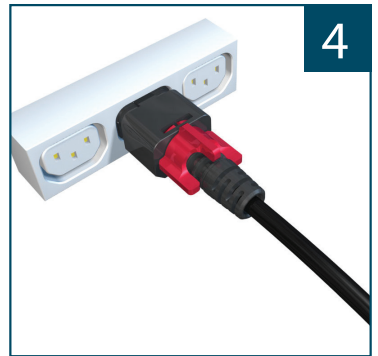


4
Cord is now secure. Visually inspect to be sure connector is fully inserted.

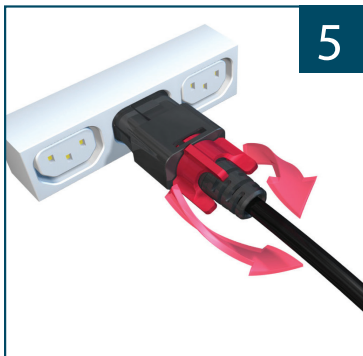


5
To release, loosen nut as far as possible.

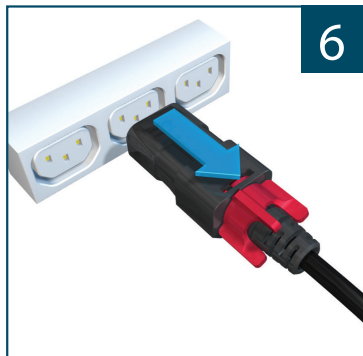

6
Cord will detach from device.

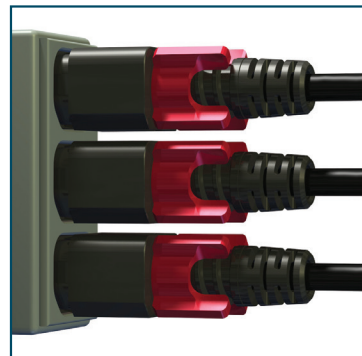

Align nuts as shown to maximize clearance in ganged receptacles.

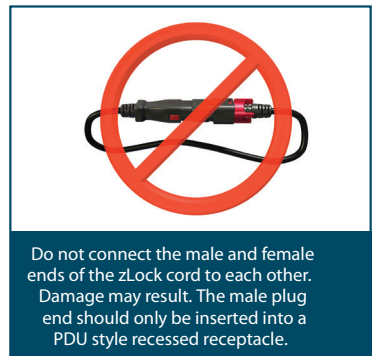

Do not connect the male and female ends of the zLock cord to each other. Damage may result. The male plug end should only be inserted into a PDU style recessed receptacle.